

Umbrella Removed

cover plate closes flush with the pavement. After removal of the umbrella, the socket socket is flush with the pavement. pavement on a footing so that the top of the The pavement socket is installed under the

Umbrella Installed

and is adjustable to allow the umbrella to be levelled. down to achieve the specified wind rating. plate is locked onto the umbrella pole cleat with a padlock. When the umbrella is installed into the socket the open cover The socket is designed to stop the umbrella from spinning This provides security for the umbrella and locks the umbrella

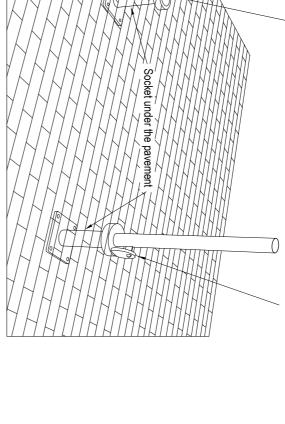


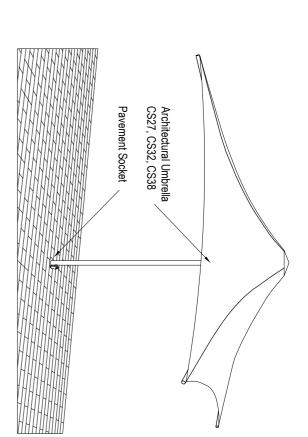

Typical Pavement Socket Installation

A socket installation allows for the removal of the umbrella.

to fit into the socket. The pole of the umbrella can be modified, at the time of ordering, The models suitable for the socket are the CS27, CS32 and CS38

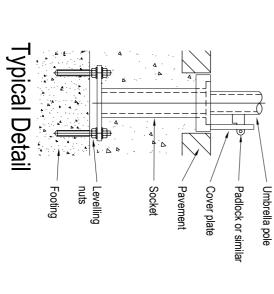

Architectural Umbrellas Pavement Socket (Centra)

